

## EnGenius I Data Center Server S21 Quick Reference Guide

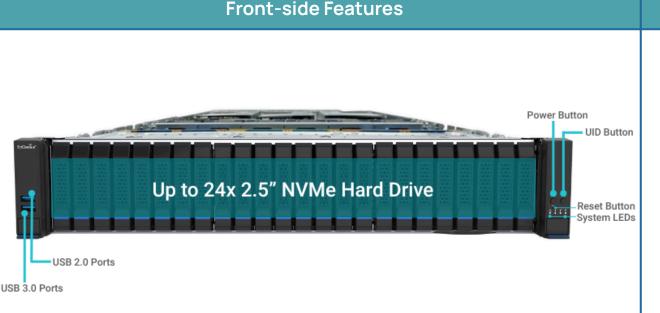

System Features: Front

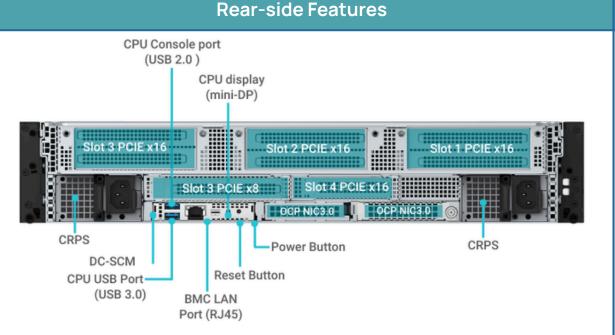

System Features Dear

• Connect: Plug a network cable into the dedicated MGMT port on the rear panel.

**BMC Quick Access** 

- Find IP: Check your DHCP server for the assigned IP, or watch for it on the screen during the Power-On Self-Test (POST).
- Log In:
- Open a web browser and enter the BMC IP address.
- Username: root
- Password: OpenBmc (Note: The first character is a zero)
- Security Warning: After your first login, you must change the default password immediately under Settings > User Management!

System reatures: Front		System reatures: Rear		
Feature	Description	Feature	Description	
Power Button	Controls system power on/off	Power Supplies	2× CRPS slots	
Reset Button	Performs system warm reboot	IPMI Management Port	1× RJ45 dedicated BMC port (AST2600) for remote management (IPMI/Redfish)	
UID Button & LED	Activate blue LED for system identification	Mini DisplayPort	1× Mini DP video output for BMC-controlled console	
Status LEDs (x4)	Fault (Red), LAN (Green/Amber), M.2 (Amber), UID (Blue)	USB Ports 1× USB 3.0 Type-A		
USB Ports	2× USB 3.0 Type-A Ports	Serial Port	1× USB 3.0	
Drive Bays	Up to 24× 2.5" U.2 NVMe/SATA Hot-swap drive bays (tool-less trays)	Expansion	Up to 8x PCIe Gen5 slots, 2x OCP NIC 3.0 slots	

## Support Resources Product Page BMC User Guide





## LED Status Reference

Link Activity / LAN Speed	Power Button LED  UID LED/System Reset Button

	Information LED						
LED	State	Description					
Power LED	Green / Blinking / Off	System On / Sleep / Off					
UID LED/System Reset Button	Blue	Identify Active					
LAN Speed	Solid Green / Solid Amber / Light Off	Speed 1G / 100 Mbps / No link					
LAN Activity	Blinking	Network Traffic					

##