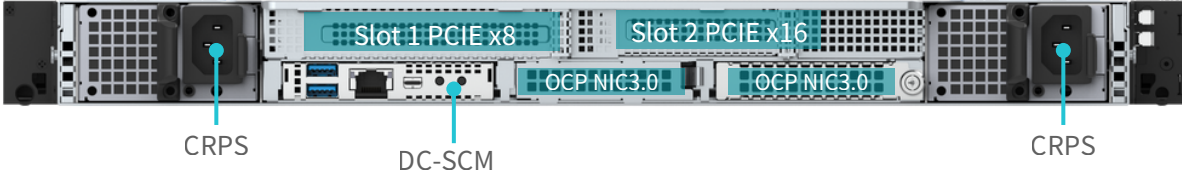
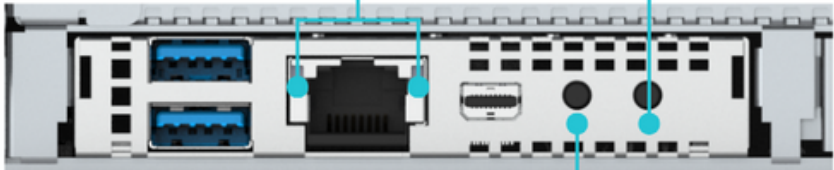


EnGenius®

I Data Center Server EAS1210 Quick Reference Guide

Front-side Features		Rear-side Features		BMC Quick Access	
				• Connect: Plug a network cable into the dedicated MGMT port on the rear panel. • Find IP: Check your DHCP server for the assigned IP, or watch for it on the screen during the Power-On Self-Test (POST). • Log In: ◦ Open a web browser and enter the BMC IP address. ◦ Username: root ◦ Password: OpenBmc (Note: The first character is a zero) • ⚠ Security Warning: After your first login, you must change the default password immediately under Settings > User Management!	
System Features: Front		System Features: Rear			
Feature	Description	Feature	Description		
Power Button	Controls system power on/off	Power Supplies	1+1 × CRPS slots		
Reset Button	Performs system warm reboot	IPMI Management Port	1× RJ45 dedicated BMC port (AST2600) for remote management (IPMI/Redfish)		
UID Button & LED	Activate blue LED for system identification	Mini DisplayPort	1× Mini DP video output		
Status LEDs (x4)	Fault (Red), LAN (Green/Amber), M.2 (Amber), UID (Blue)	USB Ports	1× USB 3.0 Type-A		
USB Ports	2× USB3.0 Type-A for keyboard/media	Serial Port	1× USB 3.0 Type-A		
Drive Bays	Up to 12× 2.5" U.2 NVMe hot-swappable drive bays (tool-less trays)	Expansion	2x PCIe Gen5 slots, 2x OCP NIC 3.0 slots		
LED Status Reference				Support Resources	
				Product Page	
					
				BMC User Guide	
					
System Block Diagram					
